

INSTRUCTIONS MANUAL

ZYY-FH08

Thank you very much for purchasing our product. We kindly ask you to read the instruction carefully and keep it for future reference.

1. Only connect the fan heater to a single-phase socket with a main voltage as specified on the rating plate.
2. Do not leave your home while the appliance is in function: ensure that the switch is in OFF (0) position and the thermostat is in minimum position. Always unplug the appliance when not in use.
3. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 100cm away from the fan heater.
4. Do not hang anything on or in front of the fan heater.
5. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.

6. Keep the air inlet and outlet free from objects: at least 1 m in front and 50 cm behind the heater.
7. Do not install the heater right below a socket.
8. Do not let animals or children touch or play with the fan heater. Pay attention! The air outlet gets hot during operation (more than 80°C, or 175 F).
9. Do not cover the heater. There is a risk of overheating or even fire.
10. Do not use this fan heater in the immediate surroundings of a bath, a shower or a swimming pool.
11. Do not use the fan heater in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. Keep the fan heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, fire or damage to the heater.
14. Store in a cool dry place when not in use.
15. The appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
16. The appliance is not intended for use by young children or infirm persons without supervision.
17. Young children should be supervised to ensure that they do not play with the appliance.

OPERATION OF THE HEATER



NOTE:- It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

INSTALLATION

The appliance requires no installation. It should be used solely as a portable appliance.

Portable appliances are not suitable for use in a bathroom.

OPERATION

- Turn the thermostat knob (left) in a clockwise direction until it reaches the maximum setting.
- Summer service (ventilation only): turn the switch (right) to setting  .
- Heating at mid power: turn the switch (right) to setting I (1000W).
- Heating at full power: turn the switch (right) to setting II (2000W).
- Switching off: turn the switch (right) to setting .

REGULATING THE THERMOSTAT

When the room has reached the required temperature turn the left thermostat knob slowly in an anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat.

CLEANING AND MAINTENANCE

Before cleaning always remove the plug from the electrical socket.

Clean the air inlet / outlet grilles frequently.

Never use abrasive powders or solvents.

TECHNICAL SPECIFICATION

Model No.: ZYY-FH08

Voltage: 220-240V 50-60Hz

Power: 1000W/2000W