

READ AND SAVE THESE INSTRUCTIONS
INSTRUCTION MANUAL
High Velocity Mobile Fan

WARNING: TO reduce the risk of fire or electrical shock, DO NOT USE THIS FAN with any SOLID STATE Speed Control Device.

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Use this fan only as described in this manual, other use not recommended may cause fire, electric shock or injury.
2. High Velocity fans are designed to create rapid air movement, therefore make sure the fan is not placed near drapes, curtains or any objects that may be drawn into the fan inlet.
3. To protect against electrical shock, do not immerse unit, plug or cord in water or spray with liquids.
4. This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.
5. Unplug the fan from the outlet when not in use, when moving fan from one location to another, servicing and before cleaning.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
8. Avoid contact with moving fan parts.
9. To disconnect, grip the plug and pull it from the wall outlet, never yank the cord.
10. Always use on a dry level surface.
11. Do not hang or mount fan on a wall or ceiling.
12. Do not operate the fan without protective front and rear grilles in position.

13. Be careful not to place the fan too close to the edge of the surface.
14. Do not use outdoors.
15. Do not let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

STAND ASSEMBLY (Figure 1)

1. Remove all contents from the carton.
2. Place Mounting Bracket on the underside of the stand halves to left of the crash roll as shown.
3. Install two screws through the bottom of the stand using a Phillips Head Screwdriver
4. Slide Axle Rod through Mounting Bracket
5. Install the two wheels onto the Axle Rod and secure with two Axle Cap Nuts. Press Axle Cap Nut onto Axle Rod.
6. Place connecting rod at the side of the crash roll on the underside of the stand, install two screws

FAN ASSEMBLY(Figure 2)

1. Place Stand flat on the floor with the Wheel at left in front of you,
2. Holding the main fan body ,make the shaped tube into the stand each side, make sure the right hole position. then install the screws.

OPERATION

1. Set your fan on a level dry surface.

2. Plug the power cord into a standard 110 V 60Hz wall outlet.
3. To operate your fan, turn the control knob to the desired fan speed
Low(1),Med(2)High(3)
4. Adjust the fan head to your desired angle.

CARE AND STORAGE

1. Turn the control to OFF and UNPLUG THE FAN BEFORE CLEANING.
2. Use only a soft damp cloth to clean the fan.
3. DO NOT immerse the fan in water and never allow water to drip into the motor housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. Store the fan in its original box or cover the fan to protect it from dust.
Store it in a cool dry place.

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.